

TESLA

FREEZER

RH1000M

RH1501ME

RH2001ME

RH2951ME

RH5001ME

User Manual

ENG

FIN



Product images are for illustrative purposes only and may differ from the actual product.

SAFETY WARNINGS

RECOMMENDATIONS:

- This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Please abandon the appliance according to local regulators for its use flammable blowing gas and refrigerant.
- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Do not use extension cords or ungrounded (two prong) adapters.
- Risk of child entrapment. Before you throw away the appliance:
 - Take off the doors.
 - Leave the shelves in place so that children may not easily climb inside.
- The appliance must be disconnected from the source of electrical supply before attempting the installation of accessory.
- Refrigerant and cyclopentane foaming material used for the appliance are flammable. Therefore, when the appliance is scrapped, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification other than be disposed by combustion, so as to prevent damage to the environment or any other harm.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.)
- Children should be supervised to ensure that they do not play with the appliance.
- To avoid contamination of food, please respect the following instructions:
 - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
 - Clean regularly surfaces that can come in contact with food and accessible drainage systems.
 - Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
 - Two-star  frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.
 - One , two  and three-star  compartments are not suitable for the freezing of fresh food.
 - If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

Meaning of safety warning symbols



The symbols indicate prohibited matters, and those behaviors are forbidden. Non-compliance with the instructions may result in product damages or endanger the personal safety of users



The symbols indicate matters that must be followed, and those behaviors must be strictly executed in line with the operation requirements. Non-compliance with the instructions may result in product damages or endanger the personal safety of users.



The symbols indicate matters to pay attention to, and these behaviors shall be specially noted. Due precautions are needed or minor or moderate injuries or damages of the product will be caused.

Electricity related warnings

- Do not pull the power cord when pulling the power plug of the freezer. Please firmly grasp the plug and pull out it from the socket directly.
- Do not damage the power cord under any condition so as to ensure safety use, do not use when the power cord is damaged or the plug is worn.
- Worn or damaged power cord shall be replaced in manufacturer-authorized maintenance stations.
- The power plug should be firmly contacted with the socket or else fires might be caused. Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.
- Please turn off the valve of the leaking gas and then open the doors and windows in case of leakage of gas and other flammable gases. Do not unplug the freezer and other electrical appliances considering that spark may cause a fire.
- To ensure safety, it is not recommended that to place regulators, rice cookers, microwave ovens and other appliances on the top of the freezer, those recommended by the manufacturer are not included. Do not use electrical appliances in the food pan.

Related warnings for use

- Do not arbitrarily disassemble or reconstruct the freezer, nor damage the refrigerant circuit; maintenance of the appliance must be conducted by a specialist.
- Damaged power cord must be replaced by the manufacturer, its maintenance department or related professionals in order to avoid danger.
- The gaps between freezer doors and between doors and freezer body are small, be noted not to put your hand in these areas to prevent from squeezing the finger. Please be gentle when open the freezer door to avoid falling articles.
- Do not pick foods or containers with wet hands in the freezing chamber when the freezer is running, especially metal containers in order to avoid frostbite.
- Do not allow children to enter or climb the freezer to prevent that children are sealed in the freezer or children are injured by the falling freezer.
- Do not spray or wash the freezer; do not put the freezer in moist places easy to be splashed with water so as not to affect the electrical insulation properties of the freezer.
- Do not place heavy objects on the top of the freezer considering that objects may fall when open the door, and accidental injuries might be caused.
- Please pull out the plug in case of power failure or cleaning. Do not connect the freezer to power supply within five minutes to prevent damages to the compressor due to successive starts.

Warnings related to placing items

- Do not put flammable, explosive, volatile and highly corrosive items in the freezer to prevent damages to the product or fire accidents.
- Do not place flammable items near the freezer to avoid fires.
- This product is household freezer and shall be only suitable for the storage of foods. According to national standards, household freezer shall not be used for other purposes, such as storage of blood, drugs or biological products.
- Do not place items such as bottled or sealed container of fluid such as bottled beers and beverages in the freezer to prevent bursts and other losses.

Warnings for energy

1. Freezer might not operate consistently when sited for an extended period of time below the cold end of the range of temperatures for which the freezer appliance is designed.
2. The fact that effervescent drinks should not be stored in food freezer compartments or cabinets or in low-temperature compartments or cabinets, and that some products such as water ices should not be consumed too cold;
3. The need to not exceed the storage time recommended by the food manufacturers for any kind of food and particularly for commercially quick-frozen food in food-freezer and frozen-food storage compartments or cabinets;
4. The precautions necessary to prevent an undue rise in the temperature of the frozen food while defrosting the refrigerating appliance, such as wrapping the frozen food in several layers of newspaper.
5. The fact that a rise in temperature of the frozen food during manual defrosting, maintenance or cleaning could shorten the storage life.
6. The necessity that, for doors or lids fitted with locks and keys, the keys be kept out of the reach of children and not in the vicinity of the freezer appliance, in order to prevent children from being locked inside.

Warnings related to disposal



The freezer's refrigerant and cyclopentane foam materials are combustible materials and discarded freezers should be isolated from fire sources and can not be burned. Please transfer the freezer to qualified professional recycling companies for processing to avoid damages to the environment or other hazards.



Please remove the door of the freezer and shelves which shall be properly placed to avoid accidents of children entering and playing in the freezer.




Correct Disposal of this product:

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

PROPER USE OF FREEZER

Names of components

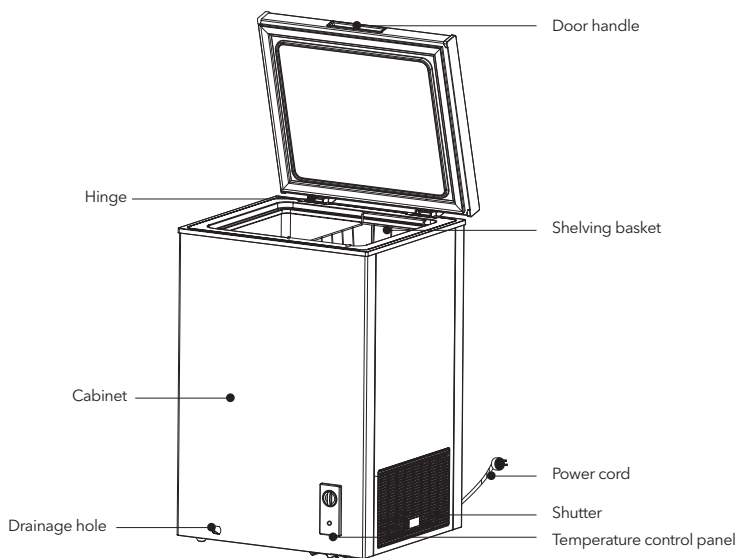


(The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor)

- The low temperature of freezer may keep food fresh for a long time and it is mainly used to store frozen foods and making ice.
- The freezer is suitable for storage of meat, fish, shrimp, pastries class and other foods not to be consumed in short term. Do not store fluids in bottled or closed containers Items such as bottled beer, beverages, etc.
- Chunks of meat are preferably to be divided into small pieces for easy access. Please be noted food shall be consumed within the shelf time.

Notice:

After long term using, there may be a certain degree of wear with the hinge, it will cause the noise when open/close the door and reduce the service life of hinge. It is recommended to put the grease on hinge for maintenance regularly, it can effectively eliminate noise and extend the service life of the hinge.

Temperature Control

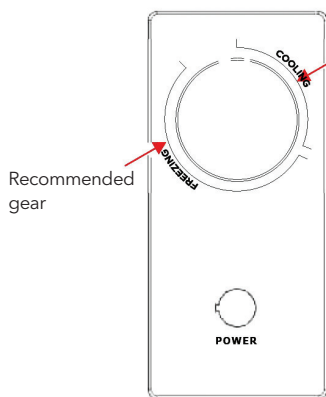


Recommended gear

- Please electrify the chest freezer, the "POWER" lamp will shine (green light).
- Rotate the thermostat knob clockwise, the temperature inside chest freezer will be lower and lower.
- "COOLING" means cooling zone, "FREEZING" means the freezing zone.
- "Recommended gear" see the schematic marking position

(The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor)

Placement

- Before using the freezer, remove all packaging materials including bottom cushions and foam pads and tapes inside the freezer, tear off the protective film on the door and the freezer body.
- Keep away from heat and avoid direct sunlight. Do not place the freezer in moist or watery places to prevent rust or reduction of insulating effect.
- The freezer should be placed in a well-ventilated indoor place; the ground shall be flat, and sturdy.
- The top space of the freezer shall be greater than 70cm, and the distances from both sides and backside shall be more than 20cm to facilitate heat dissipation.

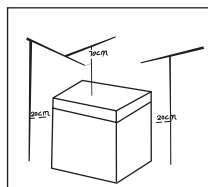

Start to use

- After transportation, please let the freezer stay for more than 2 hours before turning on the power, otherwise it will lead to a decrease in cooling capacity or a damage to the freezer.
- The freezer shall run 2 to 3 hours before loading fresh or frozen foods; the freezer shall run for more than 4 hours in summer in advance considering that the ambient temperature is high.
- Please pull out the plug in case of power failure or cleaning. Do not connect the freezer to power supply within five minutes to prevent damages to the compressor due to successive starts.

Energy saving tips

- The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
- Appliance storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the appliance less efficient. Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

MAINTENANCE OF FREEZER

Cleaning

- Dusts behind the freezer and on the ground shall be timely cleaned to improve the cooling effect and energy saving.
- Check the door gasket regularly to make sure there are no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.
- The interior of the freezer should be cleaned regularly to avoid odor.
- Please turn off the power before cleaning, remove all food, basket, container, etc.
- Use a soft cloth or sponge to clean the inside of the freezer, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean. After cleaning, open the door and let it dry naturally before turning on the power.
- For areas that are difficult to clean in the freezer (such as gaps or corners), it is recommended to wipe them regularly with a soft rag, soft brush, etc. and when necessary, combined with some auxiliary tools (such as thin sticks) to ensure no contaminants or bacteria accumulation in these areas.
- Do not use soap, detergent, scrub powder, spray cleaner, etc., as these may cause odors in the interior of the freezer or contaminated food.
- Clean the baskets with a soft cloth dampened with soapy water or diluted detergent. Dry with a soft cloth or dry naturally.
- Wipe the outer surface of the freezer with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.
- Do not use hard brushes, clean steel balls, wire brushes, abrasives (such as toothpastes), organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items, which may damage the freezer surface and interior. Boiling water and organic solvents such as benzene may deform or damage plastic parts.
- Do not rinse directly with water or other liquids during cleaning to avoid short circuits or affect electrical insulation after immersion.

Defrost

- Freezer shall be manually defrosted.
- Unplug the freezer and open the freezer door, remove foods and shelving basket before defrosting; Open the outflow hole and drainage hole (and place water container at the outflow hole);
- indoor frost will naturally melt, wipe the defrost water with a dry, soft cloth. When the frost softens, an ice scraper might be used to accelerate de-icing process.
- Please remove the food and put in a cool place when defrosting before removing accessories.



Other mechanical devices or other means shall not be used to accelerate except those recommended by the manufacturer. Do not damage the refrigerant circuit.

Stop using

Foods can be preserved for a couple of hours even in summer in case of power failure; it is recommended to reduce the frequency of opening door and do not put fresh foods into the freezer. Please unplug the freezer left unused for a long time for cleaning. Keep the door open to avoid the bad odor.

Do not turn upside or vibrate the freezer, the carrying angle can not be greater than 45°. Do not hold the door and hinge when moving this unit.



Continuous operation is recommended when the freezer is started. Please do not stop the freezer under normal circumstances so as not to affect the freezer's service life.

TROUBLESHOOTING

The following simple issues can be handled by the user. Please call the after-sale service department if the issues are not settled.

Device is not working	Check whether the freezer is plugged in and has power. Low voltage. Whether temperature control knob is in the work area. Failure power or tripping circuit.
Odor	Odorous foods should closely wrapped. Whether foods are rotten. Whether the interior shall be cleaned.
Long-term operation of compressor	It is normal that freezer operates for longer time in summer when the ambient temperature is higher. Do not put too much food in the freezer at one time. Do not put foods until they are cooled. Frequent opening of freezer door. Thick frost layer (defrost is needed).
The freezer door can not be properly closed	The freezer door is stuck by food packages. Too much food. Unbalanced freezer.
Loud noise	Whether the floor is flat, whether the placement of freezer is stable. Whether the freezer accessories are properly placed.
Transient difficulty in door opening	After refrigeration, there will be pressure difference between the inside and outside of the freezer to result in transient difficulty in door opening. This is a normal physical phenomenon.
Freezer enclosure heat Condensation	The freezer enclosure may emit heat during operation specially in summer, this is caused by the radiation of the condenser, and it is a normal phenomenon. Condensation: condensation phenomenon will be detected on the exterior surface and door seals of the freezer when the ambient humidity is large, this is a normal phenomenon, and the condensation can be wiped away with a dry towel.
Airflow sound Buzz Clatter	Refrigerants circulating in the refrigerant lines will produce eruption of sound and grunts which is normal does not affect the cooling effect. Buzz will be generated by running compressor specially when starting up or shutting down. The solenoid valve or electric switch valve will clatter which is a normal phenomenon and does not affect the operation.

TURVAVAROITUKSET

SUOSITUKSET:

- Tätä laitetta on tarkoitus käyttää kotitalouksissa ja vastaavissa sovelluksissa, kuten henkilökunnan keittiötiloissa kaupoissa, toimistoissa ja muissa työympäristöissä; maataloissa sekä asiakkaiden käytössä hotelleissa, motelleissa ja muissa asuinympäristöissä; bed and breakfast -ympäristöissä; catering- ja vastaavissa ei-vähittäismyyntisovelluksissa.
- Jos virtajohto on vaurioitunut, se on vaihdettava valmistajan, sen huoltoedustajan tai vastaavasti pätevien henkilöiden toimesta vaaran välttämiseksi.
- Älä säilytä tässä laitteessa räjähtäviä aineita, kuten palavaa ponneainetta sisältäviä aerosolipurkkeja.
- Laite on irrotettava pistokkeesta käytön jälkeen ja ennen käyttäjän huoltotoimenpiteitä.
- Pidä ilmanvaihtoaukot, laitteen kotelossa tai sisäänrakennetussa rakenteessa, vapaana esteistä.
- Älä käytä mekaanisia laitteita tai muita keinoja sulatusprosessin nopeuttamiseksi, paitsi valmistajan suosittelemlia.
- Älä vahingoita kylmäainepiiriä.
- Älä käytä sähkölaitteita laitteen elintarvikkeiden säilytyslokerossa, elleivät ne ole valmistajan suosittelemlia.
- Hävitä laite paikallisten määräysten mukaisesti, sillä siinä käytetään syttyvää puhalluskaasua ja kylmäainetta.
- Asennettaessa laitetta varmista, ettei virtajohto ole puristuksissa tai vaurioitunut.
- Älä sijoita useita kannettavia pistorasioita tai kannettavia virtalähteitä laitteen takaosaan. • Älä käytä jatkojohtoja tai maadoittamattomia (kaksi piikkiä) sovitimia. • Lapsen jäämisen vaara. Ennen laitteen hävittämistä:
 - Irrota ovet.
 - Jätä hyllyt paikoilleen, jotta lapset eivät voi helposti kiivetä sisään.
- Laite on irrotettava sähköverkosta ennen lisävarusteiden asennusta.
- Laitteessa käytettävät kylmäaine ja syklopentaanivaahdot materiaali ovat syttyviä. Siksi, kun laite romutetaan, se on pidettävä erillään tulenlähteistä ja palautettava erityisellä pätevyyden omaavalla kierrätysyhtiöllä sen sijaan, että se hävitettäisiin polttamalla, ympäristövahinkojen tai muiden haittojen välttämiseksi.
 - Tätä laitetta voivat käyttää vähintään 8-vuotiaat lapset ja fyysisesti, aistillisesti tai henkisesti rajoittuneet henkilöt tai henkilöt, joilla on vähän kokemusta ja tietoa, jos heille on annettu ohjausta tai neuvontaa laitteen turvallisesta käytöstä ja he ymmärtävät siihen liittyvät vaarat. Lapset eivät saa leikkiä laitteella. Lapset eivät saa tehdä laitteen puhdistusta tai käyttäjän huoltotoimenpiteitä ilman valvontaa.
 - Tätä laitetta ei ole tarkoitettu fyysisesti, aistillisesti tai henkisesti rajoittuneiden henkilöiden tai kokemattomien ja tietämättömien henkilöiden käyttöön, ellei heidän turvallisuudestaan vastaava henkilö ole antanut heille ohjausta tai neuvontaa laitteen käytöstä.
 - Lapsia tulee valvoa, jotta varmistetaan, etteivät he leiki laitteella.
 - Välttääksesi elintarvikkeiden saastumista, noudata seuraavia ohjeita:
 - Oven avaaminen pitkäksi aikaa voi aiheuttaa merkittävän lämpötilan nousun laitteen lokerossa.
 - Puhdista säännöllisesti pinnat, jotka voivat joutua kosketuksiin elintarvikkeiden kanssa, sekä helposti saavutettavat viemäröintijärjestelmät.
 - Säilytä raaka liha ja kala sopivissa astioissa jääkaapissa niin, ettei se ole kosketuksissa muiden elintarvikkeiden kanssa tai valu niiden päälle.
 - Kaksi tähteä  pakastelokerot soveltuvat esijäädetyttyjen elintarvikkeiden säilytykseen, jäätelön valmistamiseen ja jääkuutioiden tekemiseen.
 - Yksi , kaksi  ja kolme tähteä  jos jäähdytyslaite jätetään pitkäksi aikaa tyhjäksi, sammuta se, sulata, puhdista, kuivaa ja jätä ovi auki estääksesi homeen kehittymisen laitteessa.

Turvavaroitussymbolien merkitykset



Symbolit osoittavat kiellettyjä asioita, ja nämä käyttäytymismallit ovat kiellettyjä. Ohjeiden noudattamatta jättäminen voi johtaa tuotteen vaurioitumiseen tai käyttäjien henkilökohtaiseen turvallisuuden vaarantumiseen.



Symbolit osoittavat asioita, joita on noudatettava, ja nämä käyttäytymismallit on toteutettava tiukasti toimintavaatimusten mukaisesti. Ohjeiden noudattamatta jättäminen voi johtaa tuotteen vaurioitumiseen tai käyttäjien henkilökohtaisen turvallisuuden vaarantumiseen.



Symbolit osoittavat asioita, joihin on kiinnitettävä huomiota, ja näitä käyttäytymismalleja on erityisesti huomioitava. Tarvitaan asianmukaiset varotoimenpiteet, jotta vältetään lieviä tai kohtalaisia vammoja tai tuotteen vaurioitumista.

Sähköön liittyvät varoitukset

- Do Älä vedä virtajohtoa, kun irrotat pakastimen pistokkeen pistorasiasta. Tartu pistokkeeseen tiukasti ja vedä se suoraan pistorasiasta.
- Älä vahingoita virtajohtoa millään tavoin turvallisen käytön varmistamiseksi. Älä käytä laitetta, jos virtajohto on vaurioitunut tai pistoke on kulunut.
- Kulunut tai vaurioitunut virtajohto on vaihdettava valmistajan valtuuttamassa huoltoliikkeessä.
- Pistokkeen on oltava tiiviisti kiinni pistorasiassa, muuten voi syttyä tulipalo. Varmista, että pistorasian maadoituspiikki on varustettu luotettavalla maadoitusjohdolla.
- Jos kaasua vuotaa tai muita syttyviä kaasuja esiintyy, sulje vuotavan kaasun venttiili ja avaa sitten ovet ja ikkunat. Älä irrota pakastinta tai muita sähkölaitteita, sillä kipinä saattaa aiheuttaa tulipalon.
- Turvallisuuden varmistamiseksi ei suositella säätimien, riisinkäyttimien, mikroaaltouunien ja muiden laitteiden asettamista pakastimen päälle, ellei valmistaja niitä suosittele. Älä käytä sähkölaitteita ruokasäiliössä.

Käyttöön liittyvät varoitukset

- Älä pura tai muuta pakastinta mielivaltaisesti eikä vahingoita kylmäainepeiriä; laitteen huolto on suoritettava asiantuntijan toimesta.
- Vaurioitunut virtajohto on vaihdettava valmistajan, sen huolto-osaston tai niihin liittyvien ammattilaisten toimesta vaaran välttämiseksi.
- Pakastimen ovien ja ovien sekä pakastimen rungon väliset raot ovat pieniä, älä laita käsiäsi näihin alueisiin sormien puristumisen estämiseksi. Ole varovainen avatessasi pakastimen ovea välttääksesi esineiden putoamisen.
- Älä ota ruokia tai astioita märillä käsillä pakastuskammiossa, kun pakastin on käynnissä, erityisesti metalliastioita, jotta jäätymisvaurioita vältettäisiin.
- Älä anna lasten mennä tai kiivetä pakastimeen estääksesi lasten joutumisen tiiviiksi pakastimeen tai loukkaantumisen putoavan pakastimen vuoksi.
- Älä suihkuta tai pese pakastinta; älä laita pakastinta kosteisiin paikkoihin, joissa vesi voi roiskua, jotta pakastimen sähköeristysominaisuudet eivät vaarantu.
- Älä laita raskaita esineitä pakastimen päälle, koska esineet voivat pudota oven avautuessa ja aiheuttaa vahinkoja.
- Vedä pistoke irti sähkökatkoksen tai siivouksen yhteydessä. Älä kytke pakastinta sähköverkkoon viiden minuutin sisällä, jotta kompressori ei vaurioidu peräkkäisistä käynnistyksistä.

Varoitukset tavaroiden sijoittamisesta

- Älä laita helposti syttyviä, räjähtäviä, haihtuvia tai erittäin syövyttäviä esineitä pakastimeen vaurioiden tai tulipalojen välttämiseksi.
- Älä aseta helposti syttyviä esineitä lähelle pakastinta tulipalojen välttämiseksi.
- Tämä tuote on kotitalouskäyttöön tarkoitettu pakastin ja se on tarkoitettu ainoastaan elintarvikkeiden säilyttämiseen. Kansallisten standardien mukaan kotitalouspakastinta ei saa käyttää muihin tarkoituksiin, kuten veren, lääkkeiden tai biologisen materiaalin säilyttämiseen.
- Älä laita nesteitä sisältäviä pulloja tai suljettuja säiliöitä, kuten olut- ja virvoitusjuomapulloja, pakastimeen vaurioiden ja muiden vahinkojen välttämiseksi.

Varoitukset energian käytöstä

1. Freezer Pakastin saattaa toimia epäohdonmukaisesti, jos se on sijoitettu pitkäksi aikaa alle pakastimen suunnitellun lämpötila-alueen alarajan.
2. Hiilihapollisia juomia ei tule säilyttää elintarvikkeipakastimen osastoissa tai kaapeissa eikä matalan lämpötilan osastoissa tai kaapeissa, ja jotkin tuotteet kuten vesijäät eivät saa olla liian kylmiä.
3. On tärkeää olla ylittämättä elintarvikkeiden valmistajien suosittelemaa säilytysaikaa minkä tahansa tyyppisille elintarvikkeille, erityisesti kaupallisesti nopeasti pakastetuille elintarvikkeille elintarvikkeipakastimessa ja pakastimessa.
4. On tarpeen noudattaa varotoimia estääkseen pakastettujen elintarvikkeiden lämpötilan nousemisen liikaa sulattaessa jäähdytyslaitetta, kuten käärimällä pakastetut elintarvikkeet useiden sanomalehtikerrosten sisään.
5. On huomattava, että pakastettujen elintarvikkeiden lämpötilan nousu manuaalisen sulatuksen, huollon tai puhdistuksen aikana saattaa lyhentää niiden säilyvyysaikaa.
6. Lukolla varustettujen ovien tai kansien avainten on oltava lasten ulottumattomissa eikä niitä saa säilyttää lähellä pakastinta estääkseen lasten joutumisen lukittuun tilaan.

Hävittämiseen liittyvät varoitukset



Pakastimen kylmäaineet ja syklopentaanivaahdot materiaalit ovat syttyviä materiaaleja, eikä käytöstä poistettuja pakastimia saa altistaa tulenlähteille eikä polttaa. Siirrä pakastin ammattitaitoisiin kierrätysyrityksiin käsiteltäväksi välttääksesi ympäristövahinkoja tai muita vaaroja.



Ole hyvä ja poista pakastimen ovi ja hyllyt, jotka on asetettava asianmukaisesti estääksesi lasten vahingot, kun he menevät ja leikkivät pakastimessa.




Tämän tuotteen oikea hävittäminen:

Tämä merkintä osoittaa, että tätä tuotetta ei tulisi hävittää muiden kotitalousjätteiden joukossa. Estääksesi mahdolliset ympäristölle tai ihmisten terveydelle aiheutuvat haitat hallitsemattomasta jätehävityksestä, kierrätä se vastuullisesti edistääksesi materiaaliressurssien kestävää uudelleenkäyttöä. Palauttaaksesi käytetyn laitteen, käytä palautus- ja keräysjärjestelmiä tai ota yhteyttä siihen vähittäismyyjään, josta tuote on ostettu. He voivat ottaa tämän tuotteen ympäristöystävälliseen kierrätykseen.

PAKASTIMEN OIKEA KÄYTTÖ

Komponenttien nimet

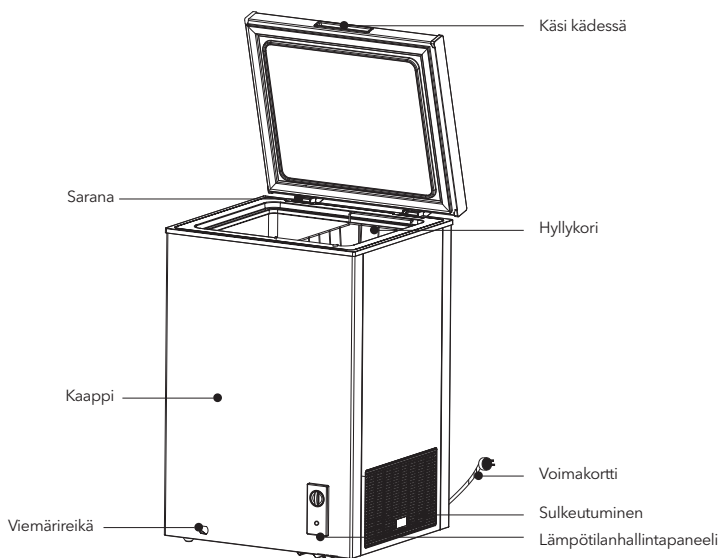


(Kuva yllä on vain viitteellinen. Todellinen kokoonpano riippuu fyysisestä tuotteesta tai jakelijan ilmoituksesta.)

- Pakastimen alhainen lämpötila voi säilyttää ruoan tuoreena pitkään ja sitä käytetään pääasiassa pakastettujen ruokien säilyttämiseen ja jään valmistukseen.
- Pakastin soveltuu lihan, kalan, katkarapujen, leivonnaisten ja muiden lyhytikäiseen säilytykseen sopimattomien ruokien säilytykseen. Älä säilytä nesteitä pulloissa tai suljetuissa astioissa, kuten pulloitettua olutta, juomia jne.
- Lihamöhkäleet olisi hyvä jakaa pienemmiksi paloiksi helpomman pääsyn varmistamiseksi. Huomioi, että ruoka tulisi nauttia säilyvyysajan sisällä.

Huomioi:

Pitkäaikaisen käytön jälkeen voi olla tietynasteista kulumista, se aiheuttaa melua, kun ovi avataan / suljetaan ja vähentää hännän käyttöikää. It on suositeltavaa laittaa rasvaa liima huoltoon säännöllisesti, se voi tehokkaasti poistaa melua ja pidentää liiman käyttöikää.

Lämpötilan hallinta

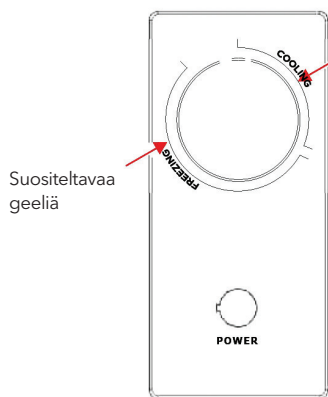


Suosittelavaa geeliä

- Säädä rintakehän jääkaappi, "POWER" lamppu loistaa (green light).
- Käännä termostaattipainiketta kellon ympäri, rintakehän pakastimessa oleva lämpötila on alempi ja alempi.
- "KÄYTTÖ" tarkoittaa jäähdytysaluetta, "FREEZING" viittaa jäädäytysvyöhykkeeseen.
- "Suositeltu laite" katso kaavamainen merkintäasento

(Yllä oleva kuva on vain viittausta varten. Todellinen kokoonpano riippuu fyysisestä tuotteesta tai jakelijan ilmoituksesta)

Sijainti

- Ennen pakastimen käyttöä poista kaikki pakkausmateriaalit, mukaan lukien pohja- ja vaahdotuotit ja nauha pakastimessa, irrota suojaava kalvo ovesta ja pakastin rungosta.
- Pidä kaukana lämmöstä ja vältä suoraa auringonvaloa. Älä aseta pakastinta kosteisiin tai vedellisiin paikkoihin ruosteen estämiseksi tai eristysvaikutuksen vähentämiseksi.
- Jääkaappi on sijoitettava hyvin tuuletettuun sisäiseen paikkaan; maaperän on oltava tasainen ja kiinteä.
- Jäänkaapin yläpinta-ala tulee olla yli 70 cm ja etäisyydet molemmin puolin ja takaosaan yli 20 cm lämmön hajottamisen helpottamiseksi.

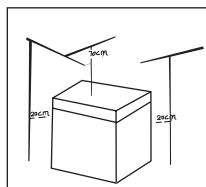

Aloita käyttäminen

- Kuljetuksen jälkeen jätä pakastimen olemaan yli 2 tuntia ennen virran kytkemistä päälle, muuten se johtaa jäähdyttämiskapasiteetin vähenemiseen tai pakastin vaurioitumiseen.
- Jääkaappi on käytettävä 2-3 tuntia ennen tuoreiden tai jäädäytettyjen elintarvikkeiden lastausta; pakastin on oltava käytössä yli 4 tuntia etukäteen kesällä ottaen huomioon ympäristön lämpötila on korkea.
- Poista kytkin virtalähteestä virrankatkoksen tai puhdistuksen sattuessa. Älä kytkä pakastinta virtalähteeseen viiden minuutin kuluessa, jotta kompressorin ei vahingoitu peräkkäisten käynnistysten vuoksi.

Energiansäästövinke

- Laite on sijoitettava huoneen viileimmälle alueelle, kaukana lämpöä tuottavista laitteista tai lämmitysputkista ja suorasta auringonvalosta.
- Anna kuumien elintarvikkeiden jäähtyä huoneenlämpötilaan ennen laitteeseen sijoittamista. Laitteen ylikuormitus pakottaa kompressorin toimimaan pidempään. Ruoka, joka jäätyy liian hitaasti voi menettää laatua tai pilata.
- Muista kääriä elintarvikkeet kunnolla ja pyyhi säiliöt kuivaksi ennen niiden asettamista laitteeseen. Tämä vähentää jäätymistä laitteen sisällä.
- Laitteen säilytysastiaa ei saa kääriä alumiinifolioilla, vaha-paperilla tai paperipyyhkeillä. Liners häiritsevät kylmän ilmankiertoa, mikä tekee laitteesta vähemmän tehokkaan. Järjestä ja merkitä ruokaa vähentämään oviaukkoja ja laajennettuja hakuja. Poista yhtä monta kohdetta kerrallaan ja sulje ovi mahdollisimman pian..

PAKASTIMEN HUOLTO

Puhdistus

- Pölyt pakastimen takaa ja lattiasta on puhdistettava säännöllisesti parantaaksesi jäähdytystehoa ja energiansäästöä.
- Tarkista oven tiiviste säännöllisesti varmistaaksesi, ettei siellä ole roskia. Puhdista oven tiiviste pehmeällä liinalla, joka on kostutettu miedolla saippuavedellä tai laimennetulla pesuaineella.
- Pakastimen sisätilat tulisi puhdistaa säännöllisesti hajujen välttämiseksi.
- Sammuta virta ennen puhdistusta ja poista kaikki ruoka, kori, astiat jne.
- Käytä pehmeää liinaa tai sienellä puhdistaa pakastimen sisäpuoli, kaksi ruokalusikallista leivin sooda ja neljannes litraa lämmintä vettä. Huuhtelee vedellä ja pyyhi kuivaksi. Puhdistuksen jälkeen avaa ovi ja anna kuivua luonnollisesti ennen virran kytkemistä päälle.
- Vaikeasti puhdistettavat alueet pakastimessa (kuten raot tai nurkat) on suositeltavaa pyyhkiä säännöllisesti pehmeällä liinalla, pehmeällä harjalla jne. Tarvittaessa käytä apuna joitakin apuvälineitä (kuten ohuita tikkuja), jotta alueet pysyvät puhtaina ilman saostumia tai bakteerien kertymistä.
- Älä käytä saippuaa, pesuainetta, hankaavia jauheita, suihkepuhdistusaineita jne., sillä ne voivat aiheuttaa hajuja pakastimen sisätiloissa tai saastuttaa ruokaa.
- Puhdista korit pehmeällä liinalla, joka on kostutettu miedolla saippuavedellä tai laimennetulla pesuaineella. Kuivaa pehmeällä liinalla tai anna kuivua luonnollisesti.
- Pyyhi pakastimen ulkopinta pehmeällä liinalla, joka on kostutettu miedolla saippuavedellä, pesuaineella jne., ja kuivaa sitten.
- Älä käytä kovia harjoja, teräspalloja, teräsharjoja, hankaavia aineita (kuten hammastahnaa), orgaanisia liuottimia (kuten alkoholia, asetonia, banaaniöljyä jne.), kiehuva vettä, happoja tai emäksisiä aineita, jotka voivat vahingoittaa pakastimen pintaa ja sisätiloja. Kiehuva vesi ja orgaaniset liuottimet kuten bentseeni voivat muuttaa tai vahingoittaa muoviosia.
- Älä huuhtelee suoraan vedellä tai muilla nesteillä puhdistuksen aikana, jotta vältetään oikosululta tai sähköeristyksen vaarantumiselta upotuksen jälkeen.

Sulatus

- Pakastin on sulatettava manuaalisesti.
- Irrota pakastimen pistoke ja avaa pakastimen ovi. Poista ruoat ja säilytyskori ennen sulatusta. Avaa ulosvirtausreikä ja tyhjennysreikä (ja aseta vesikeräin ulosvirtausreiän alle).
- Sisäinen huurre sulaa luonnostaan; pyyhi sulamisvesi kuivalla, pehmeällä liinalla. Kun huurre pehmenee, voit käyttää jäätikkää nopeuttaaksesi sulatusprosessia.
- Poista ruoka ja laita se viileään paikkaan sulatuksen ajaksi ennen kuin poistat tarvikkeet.



Muita mekaanisia laitteita tai muita keinoja ei saa käyttää sulatuksen nopeuttamiseen paitsi niitä, jotka valmistaja suosittelee. Älä vahingoita kylmäainejärjestelmää.

Lopeta käyttö

Ruokaa voidaan säilyttää muutaman tunnin ajan myös kesällä sähkökatkoksen sattuessa; suositellaan vähentämään oven avaamisen tiheyttä ja olla laittamatta tuoreita ruokia pakastimeen. Pitkäaikaisen käyttämättömyyden aikana suositellaan irrottamaan pakastimen pistoke puhdistusta varten. Pidä ovi auki pahan hajun välttämiseksi. Älä käännä tai tärise pakastinta, kuljetuskulma ei saa olla suurempi kuin 45°. Älä pidä kiinni ovesta tai saranosta siirrettäessä yksikköä.



Jatkuvaa toimintaa suositellaan pakastimen käynnistyessä. Älä pysäytä pakastinta normaaleissa olosuhteissa, jotta se ei vaikuttaisi pakastimen käyttöikään.

VIANMÄÄRITYS

Seuraavat yksinkertaiset ongelmat voidaan käsitellä käyttäjän toimesta. Ota yhteys jälkimyyntiosastoon, jos ongelmat eivät ratkea.

Laite ei toimi	Tarkista, onko jääkaappi kytketty päälle ja onko se virtaa. Alhainen jännite Onko lämpötilan säätöpainike työalueella. Virran häiriö tai tripping circuit.
Tuoksua	Tuoksuvien elintarvikkeiden tulee olla tiiviisti käärittyjä. Riippumatta siitä, ovatko elintarvikkeet rikki. Riippumatta siitä, siivotaanko sisätilat.
Kompressorin pitkäaikainen käyttö	On normaalia, että pakastin toimii pidempään kesällä, kun ympäristön lämpötila on korkeampi. Älä laita liikaa ruokaa jääkaappiin kerralla. Älä laita ruokaa ennen kuin se on jäähtynyt. Jääkaapin ovet avataan usein. Tyylikäs Frost Layer (defrost is needed).
Jääkaapin ovea ei voi sulkea kunnolla	Jääkaapin ovi on tukossa elintarvikepakkauksilla. Liian paljon ruokaa Epätasapainoinen jääkaappi
Ääniä	Onko lattia tasainen, onko pakastimen sijoittaminen vakaa. Jääkaapin lisävarusteet on sijoitettu oikein.
Väliaikainen vaikeus ovien avaamisessa	Jäähdytyksen jälkeen jääkaapin sisä- ja ulkopuolella on paineero, joka aiheuttaa ohimeneviä vaikeuksia ovien avaamisessa. Tämä on normaali fyysinen ilmiö.
Jääkaappi lämmittää	Jääkaappi voi tuottaa lämpöä käytön aikana erityisesti kesällä, tämä johtuu kondensaattorin säteilystä, ja se on normaali ilmiö.
Kondensaatio	Kondensointi: kondensointiilmiö havaitaan pakastimen ulkopinnalla ja ovien tiivisteillä, kun ympäristön kosteus on suuri, tämä on normaali ilmiö, ja kondensoituminen voidaan pyyhkiä pois kuivalla pyyheellä.
Ilmavirtausääni Surina Klappi	Jäähdytyslinjoissa kiertävät jäähdytysnesteet tuottavat äänen ja gruntin purkautumista, mikä normaalisti ei vaikuta jäähdyttävään vaikutukseen. Buzz syntyy käyttämällä kompressoria erityisesti käynnistettäessä tai sammuttaessa. Solenoidiventtiili tai sähkökytkinventtiili vilkkuu, mikä on normaali ilmiö eikä vaikuta toimintaan

TESLA

tesla.info

